


# PERSPEX BOX MOUNTING GUIDE

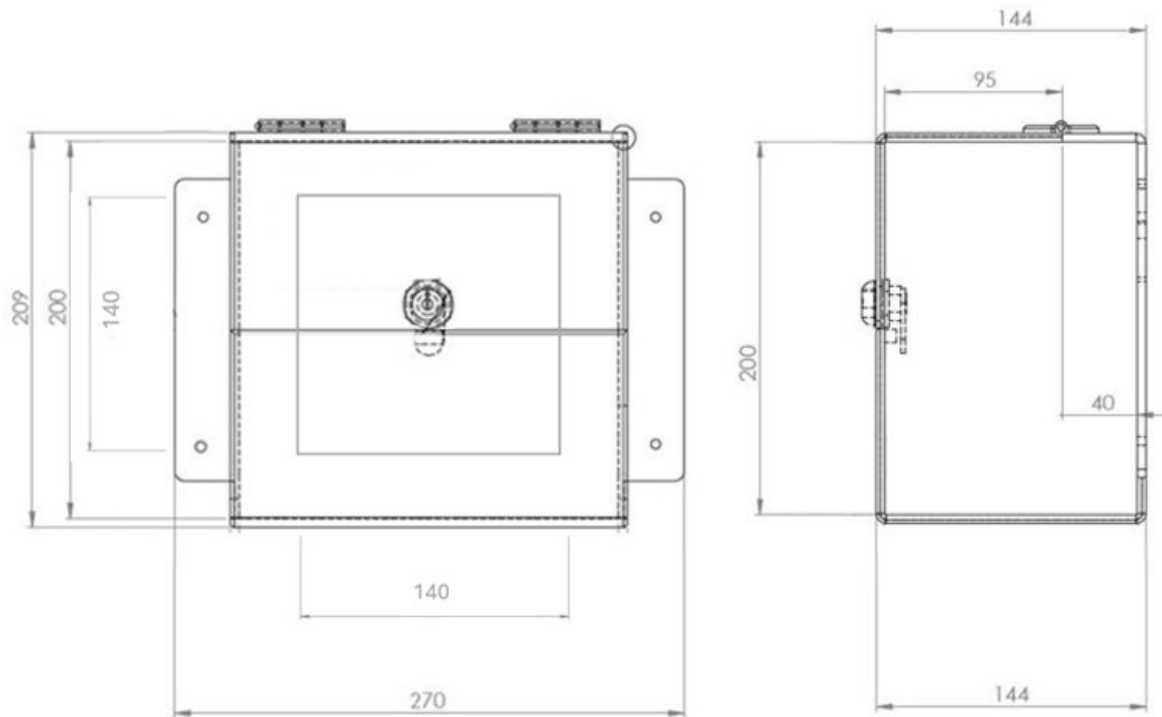

- Boxes are mounted using 4 screws (The type of screw will depend on the surface the box is being mounted to).
- Boxes NEED to be accessible as students may need to get their head within 10 cm to connect their hearing aids. We recommend a height of 1000mm AFL.
- Boxes have a 140mm x 140mm cutout in the back panel to enable clearance for various wall plate sizes that can be used for GPO or Audio.

**ALL ELECTRICAL WORK SHOULD BE CARRIED OUT BY AN APPROPRIATELY QUALIFIED ELECTRICIAN**