



PERSPEX BOX MOUNTING GUIDE

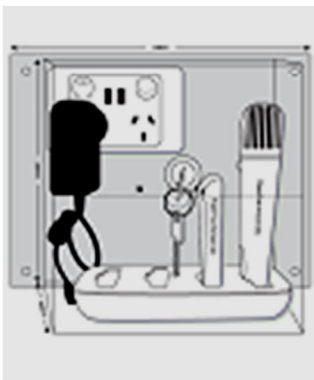

- Boxes are mounted using 4 screws (The type of screw will depend in the surface you are mounting to).
- Boxes NEED to be accessible as students may need to get their head within 10 cm to connect their hearing aids. We recommend a height of 1000mm afl.
- Boxes have a cutout for a standard wall plate that can be used for GPO or Audio.
- Boxes are designed for either configuration as shown.

ALL ELECTRICAL WORK SHOULD BE CARRIED OUT BY AN APPROPRIATELY QUALIFIED ELECTRICIAN

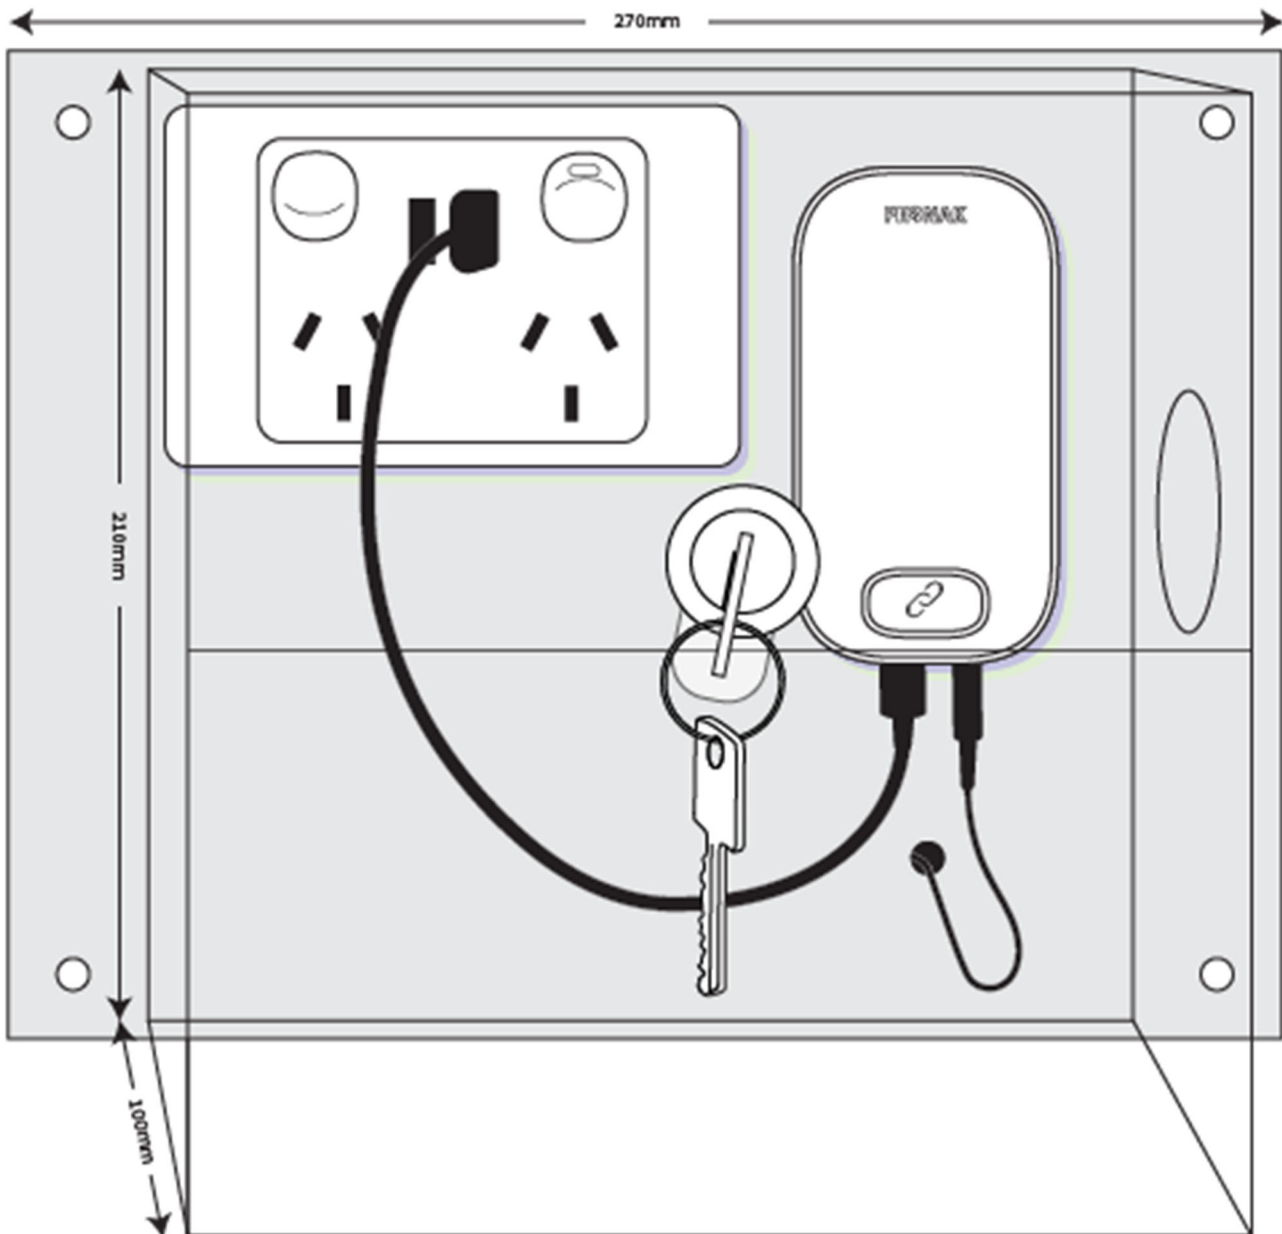

Hearing Loop Australia
Keeping your audience in the loop

www.hearingloop.com.au
info@hearingloop.com.au
1300 669 721