

CONTACTA COUNTER SOUND TRANSFER PACKAGE


Counter Sound Transfer Package

The speech transfer package provides assistance for clear two way communication where normal speech is impaired by the use of glass, a security screen or other similar barriers.

- Energy-saving “green” standby mode is automatically used, achieving a power saving of up to 80%
- Automatic Gain Control (ACG), compression, and noise gate to ensure even amplification
- Constant-current Loop drive (with engineer adjustable loop drive level)
- Isolated audio line input / output allows additional line level audio input or output to recording system
- LED column indicator aids adjustments and indicates power and status
- Continuous self-testing means that no specialized equipment is required to confirm functionality
- DC Power
- Power and status indication: Green/red LED column

Recommended Applications:

- Reception Desks
- Service Counters where protection barriers are installed

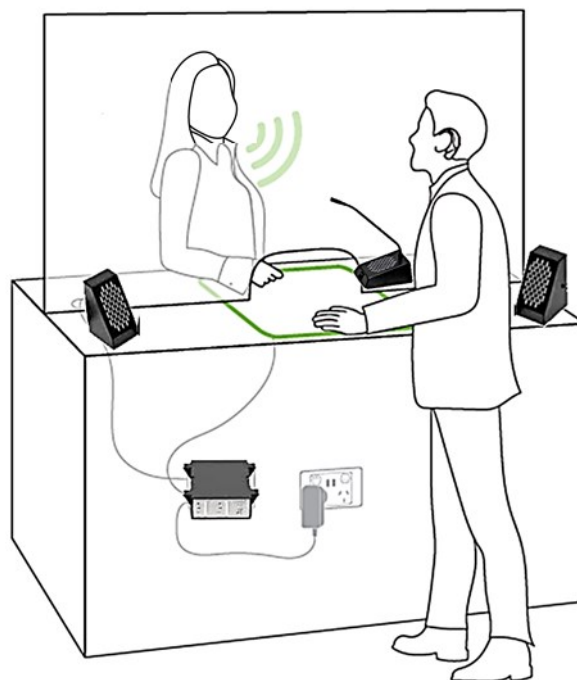

Counter Sound Transfer Package

This package is a simple and can be used by all people, including those with a hearing impairment.

A professional consultation is recommended to ensure complete coverage and compliance.

Package includes:

- 1 x Hearing Loop Amplifier Transmitter
 - 1 x Hearing Loop Pad
 - 2 x Surface Mounted Speakers
 - 1 x Gooseneck Microphone
 - 1 x Contacta Loop Listener
 - 1 x Braille Hearing Augmentation Sign
- (Installation extra—quote available on request)



Hearing Loop Australia
Keeping your audience in the loop

www.hearingloop.com.au
info@hearingloop.com.au
1300 669 721