



# PERSPEX BOX MOUNTING GUIDE

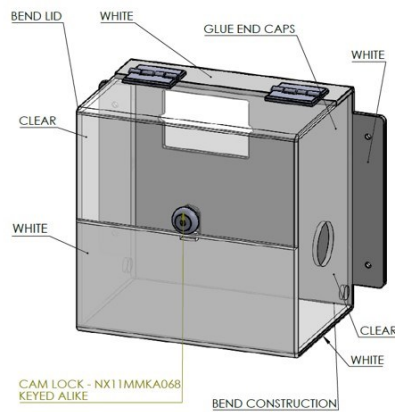

- Boxes are mounted using 4 screws (The type of screw will depend on the surface the box is being mounted to).
- Boxes NEED to be accessible as students may need to get their head within 10 cm to connect their hearing aids. We recommend a height of 1000mm AFL.
- Boxes have a cutout in the back panel for a standard wall plate that can be used for GPO or Audio. Appropriately

**ALL ELECTRICAL WORK SHOULD BE CARRIED OUT BY AN APPROPRIATELY QUALIFIED ELECTRICIAN**

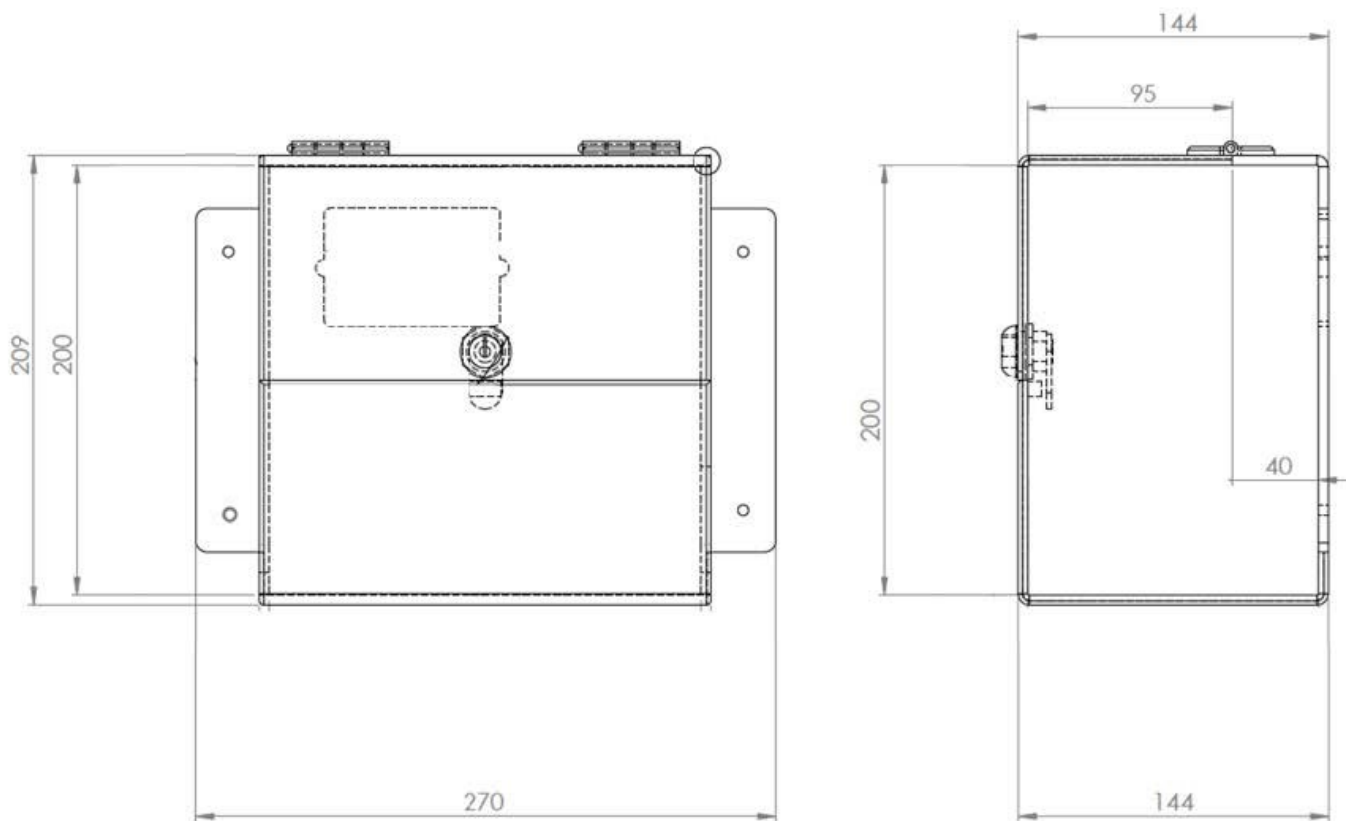

**Hearing Loop Australia**  
Keeping your audience in the loop

www.hearingloop.com.au  
info@hearingloop.com.au  
1300 669 721